


TERMINALS OF ECU

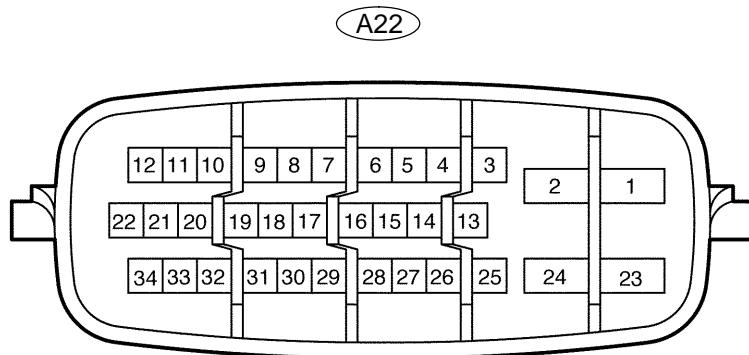

P

F17533

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
IG1 (A22 – 25) – GND (A22 – 2, 24)	Y – R ↔ W – B	IG switch ON	10 – 14
+BS (A22 – 1) – GND (A22 – 2, 24)	B – L ↔ W – B	Always	10 – 14
+BM (A22 – 23) – GND (A22 – 2, 24)	B ↔ W – B	Always	10 – 14
FL+ (A22 – 9) – FL– (A22 – 8)	Y ↔ BR	IG switch ON Slowly turn left front wheel	AC generation
FR+ (A22 – 31) – FR– (A22 – 30)	P ↔ L	IG switch ON Slowly turn right front wheel	AC generation
RL+ (A22 – 11) – RL– (A22 – 12)	R ↔ G	IG switch ON Slowly turn left rear wheel	AC generation
RR+ (A22 – 33) – RR– (A22 – 34)	B ↔ W	IG switch ON Slowly turn right rear wheel	AC generation
STP (A22 – 10) – GND (A22 – 2, 24)	G – W ↔ W – B	Stop lamp switch ON	10 – 14
		Stop lamp switch OFF	Below 1.0
WA (A22 – 13) – GND (A22 – 2, 24)	B – L ↔ W – B	IG switch ON, ABS warning light ON	7 – 10
		IG switch ON, ABS warning light OFF	Below 2.0
D/G (A22 – 14) – GND (A22 – 2, 24)	W ↔ W – B	IG switch ON, ABS warning light OFF	10 – 14
Ts (A22 – 15) – GND (A22 – 2, 24)	R – Y ↔ W – B	IG switch ON	10 – 14
Tc (A22 – 16) – GND (A22 – 2, 24)	Y – B ↔ W – B	IG switch ON	10 – 14
EXI (A22 – 21) * – GND (A22 – 2, 24)	G – B ↔ W – B	IG switch ON, 4WD detecting switch OFF	10 – 14
		IG switch ON, 4WD detecting switch ON	Below 2.0
EXI2 (A22 – 19) – GND (A22 – 2, 24)	L – Y ↔ W – B	IG switch ON, REAR DIFF LOCK switch OFF	8 – 14
		IG switch ON, REAR DIFF LOCK switch ON	Below 2.0
EXI4 (A22 – 17) * – GND (A22 – 2, 24)	GR ↔ W – B	IG switch ON, transfer except L4 position	8 – 14
		IG switch ON, transfer in L4 position	Below 2.0
VGS (A22 – 29) * – GND (A22 – 2, 24)	W ↔ W – B	IG switch ON, ABS warning light OFF	4.75 – 5.25

GGND (A22 – 7) * – GND (A22 – 2, 24)	B↔W – B	IG switch ON, ABS warning light OFF	10 – 14
GL1 (A22 – 4) * – GND (A22 – 2, 24)	R↔W – B	IG switch ON, ABS warning light OFF	10 – 14

*: 4WD and pre-runner