

CIRCUIT INSPECTION

DTC	P0500/21	Vehicle Speed Sensor "A"
------------	-----------------	---------------------------------

DTC	P0503/23	Vehicle Speed Sensor "A" Intermittent/Erratic/High
------------	-----------------	---

CIRCUIT DESCRIPTION

See page [DI-378](#).

DTC No.	DTC Detection Condition	Trouble Area
P0500/42 P0503/23	No vehicle speed sensor signal to ECM under following conditions (a) and (b): (2 trip detection logic) (a) Park/neutral position switch is OFF (b) Vehicle is being driven	<ul style="list-style-type: none"> • Combination meter • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • ECM

WIRING DIAGRAM

See page [DI-378](#).

INSPECTION PROCEDURE

See page [DI-378](#).