


CRUISE Main Indicator Light Circuit

CIRCUIT DESCRIPTION


When the cruise control main switch is turned ON, CRUISE main indicator light lights up.

WIRING DIAGRAM

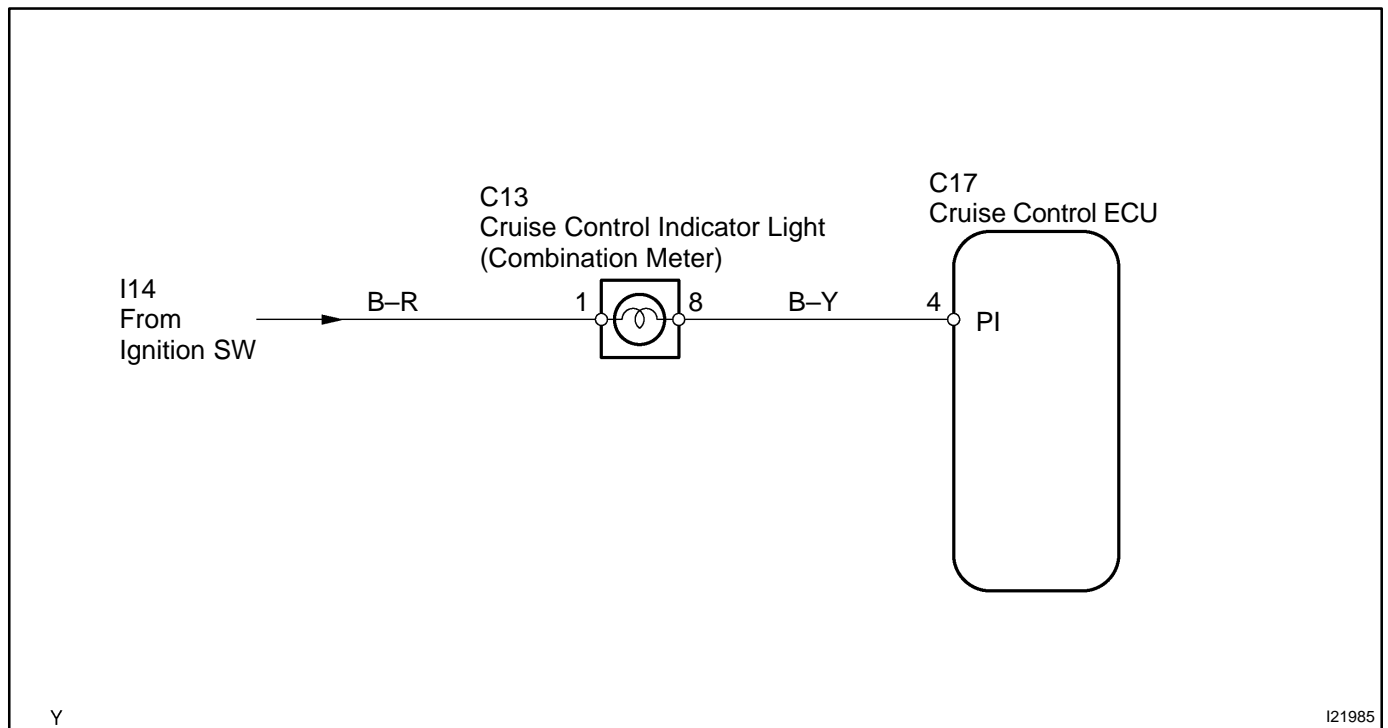

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check voltage between terminal PI of cruise control ECU connector and body ground. |
|----------|---|

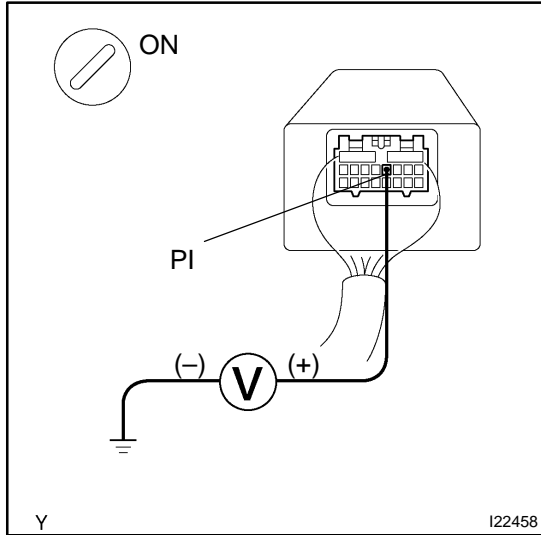

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure the voltage between terminal PI of the ECU connector and the body ground, when the main switch is ON and OFF.

OK:

Switch Position	Voltage
OFF	10 – 16 V
ON	Below 1.2 V

OK → Proceed to next circuit inspection shown in problem symptoms table (See page [DI-730](#)).

NG

- | | |
|----------|---|
| 2 | Check combination meter (See page BE-2). |
|----------|---|

NG → Replace combination meter.

OK

Check and replace cruise control ECU (See page [IN-28](#)).