



## REPLACEMENT

1. **REMOVE THROTTLE BODY** (See page [SF-30](#))
2. **REMOVE CAMSHAFT POSITION SENSOR**
  - (a) Disconnect the sensor connector.
  - (b) Remove the bolt and sensor.
3. **REINSTALL NEW CAMSHAFT POSITION SENSOR**
  - (a) Install a new sensor with the bolt.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**
  - (b) Connect the sensor connector.
4. **REINSTALL THROTTLE BODY** (See page [SF-32](#))